



# SALES BULLETIN N° 31

## Choice of SUNTEC pump configuration (shaft rotation and nozzle outlet location)

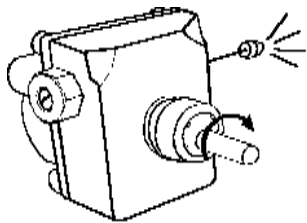


**A :** pump seen from shaft end,  
clockwise rotation  
right hand nozzle outlet.

Example : AL 35 **A** 9526 1 P 05 00

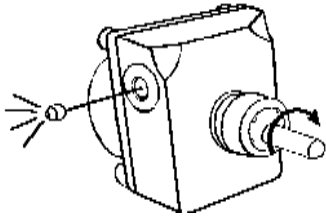


**B :** pump seen from shaft end,  
clockwise rotation  
left hand nozzle outlet.

Example : AN 67 **B** 1335 1 P

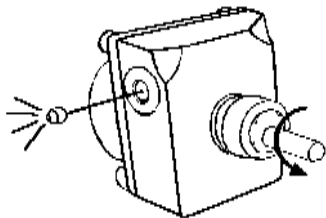

**C :** pump seen from shaft end,  
anti-clockwise rotation  
left hand nozzle outlet.

Example : AS 47 **C** 1538 1 P 05 00

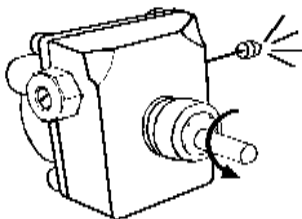

**D :** pump seen from shaft end,  
anti-clockwise rotation  
right hand nozzle outlet.

Example : AJ 4 **D C** 1000 2 P

### Notes :

This codification is valid for any SUNTEC pump except A2L pump.  
In this case, the configuration is determined by the shaft rotation and the side pressure gauge port location.

TA and T pumps exist only in A and C configurations.

