


When replacing models J & H with models A & B, several requirements must be determined in order to select a proper replacement:

- RPM speed
- Nozzle rating
- Mounting configuration
- Shaft rotation
- Porting features

Due to differences in shaft sizes between models, it may be necessary to change the coupling or use a «SHAFT ADAPTER» for connection to the existing coupling. See installation procedures below

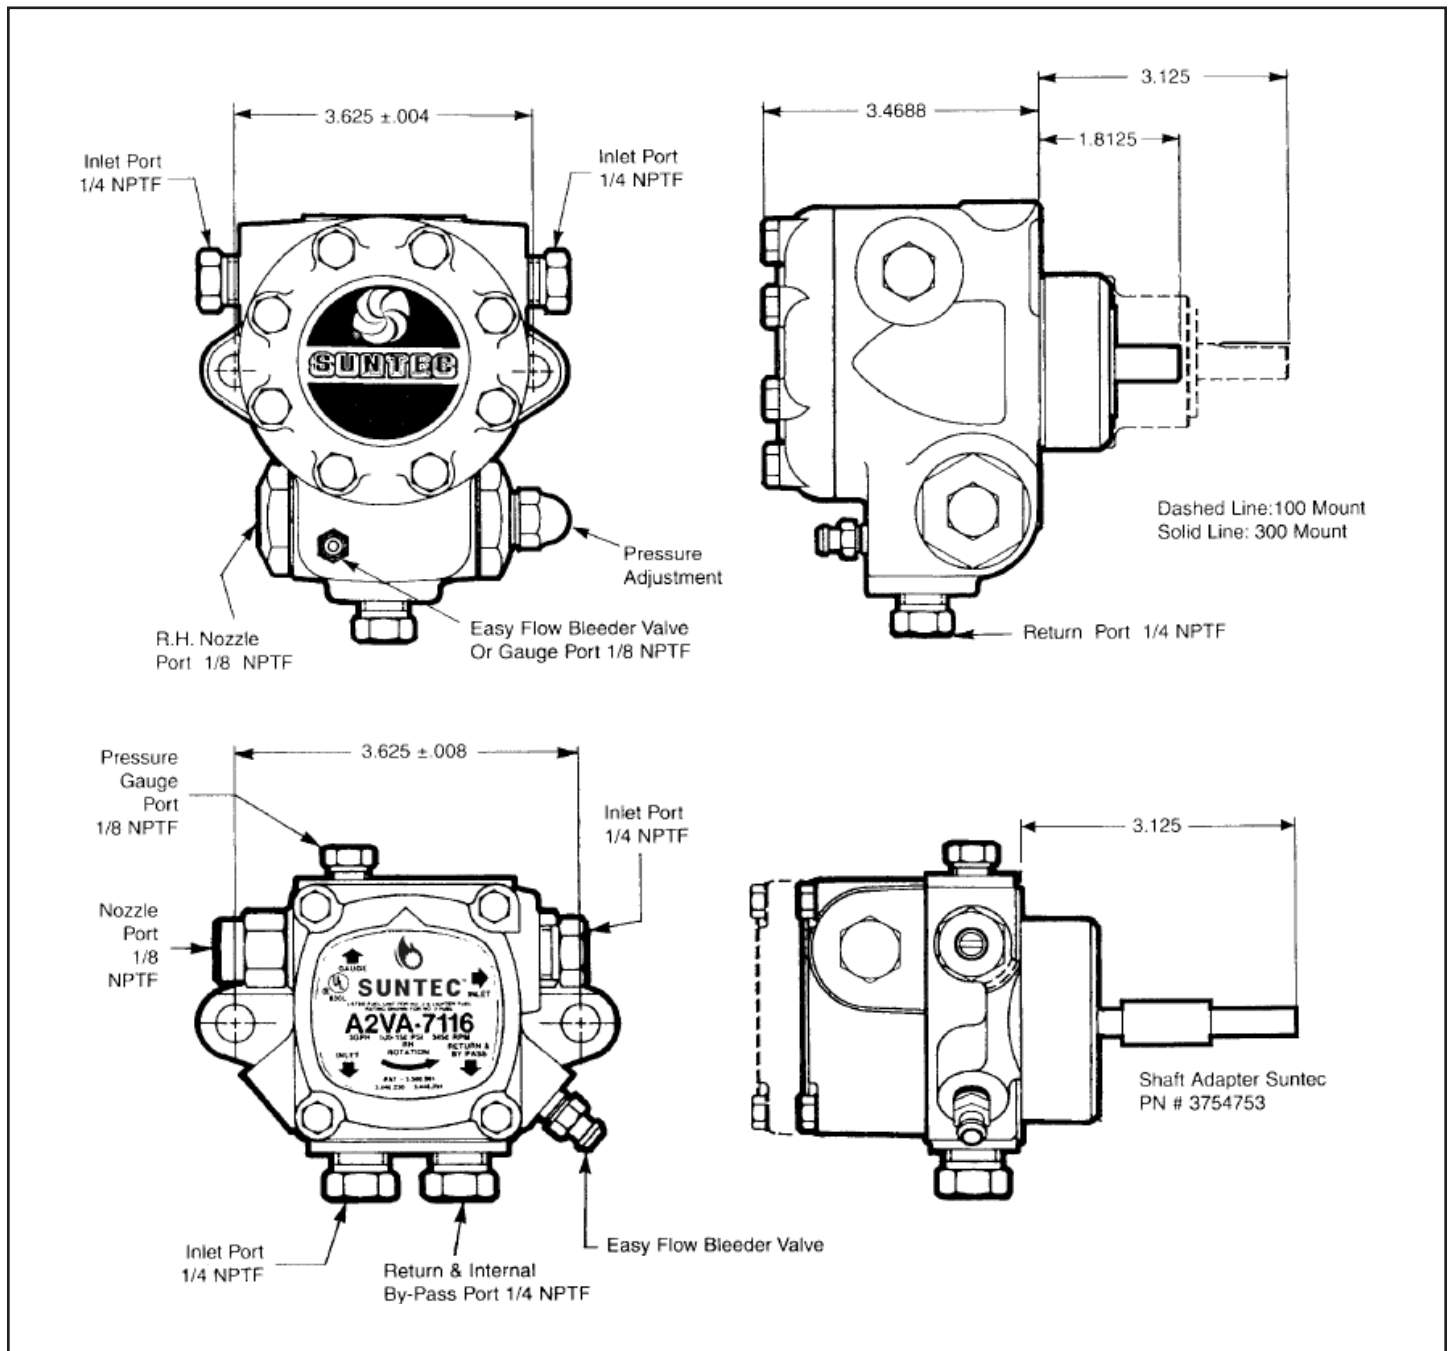

SUNTEC INDUSTRIES INCORPORATED
A and B Replacements for J and H Models

MODEL J	REPLACEMENT*	
	1725 RPM	3450 RPM
JA2BB-100		B2TA-8260
JA2BB-300		B2TA-8260
JB2BB-100		B2TA-8260
JB2BB-300		B2TA-8260
JJ2BB-300		A2VA-7116
J2BA-100	A1YA-7912	
J2BB-100	A1YA-7912	
J2BB-300	A1YA-7912	
J2BCF-412	A1YC-7914	
J3BA-100	A1YA-7912	
J3BB-100	A1YA-7912	
J3BB-200	A1YA-7912	

MODEL H	REPLACEMENT*	
	1725 RPM	3450 RPM
HA2BB-100		B2TA-8260
HA2BB-300		B2TA-8260
HB2BB-100		B2TB-8260
HB2BB-300		B2TB-8260
H2BB-100	B1VA-8212	B2TA-8260
H2BB-300	B1VA-8212	B2TA-8260
H2BC-412		B2TC-8262
H2PB-100	B1VA-8212	B2TA-8260
H3BB-100		B2TA-8260
H3BB-200		B2TA-8260
H3PB-B100		B2TA-8260
H3BA-100		B2TA-8260
H3BA-200		B2TA-8260
H3PA-100		B2TA-8260
H3BC-100		B2TC-8262
H3PAN-C150H		B2TA-8249
H3PAN-C160H		B2TA-8249
H4PAN-C151H		B2TA-8930
H4PAN-C161H		B2TA-8930
H4PC-C200H		B2TC-8931

(*) When replacing -100 and -200 models a shaft extension will be needed.